

CuddeView[™] X2

Scouting Camera Viewer



*"The colors captured are second to none!
Thanks, Cuddeback, for an excellent product!"*
– Cal Otten - Mehoopany, PA



*"I would recommend these cameras to anyone
looking for a great trail camera! Lightning fast
trigger speed, longest lasting battery life!"*
– Weston Lovelette - Elk River, MN



*"I love my Cuddeback, it is the best on
the market."*
– Chris Ransom - Vandalia, OH

Now Typical, Inc.
P.O. Box 10447
Green Bay, WI 54307-0447



Fast trigger speed, long battery life

920-347-3810
www.cuddeback.com



Owner's Manual

CuddeView™ X2

Scouting Camera Viewer

Table of contents

Get to know your CuddeView X2	1
Install batteries	2
Install SD card(s)	3
Power on/off	4
Card status screen	5
Viewing images	6
Zoom in/out	7
Panning	8
Copy images	9
Delete images	10
Rotation Method for checking cameras	11-12
PC card reader	13
View images on TV	14




Get to know your CuddeView X2



Bottom view



Side view

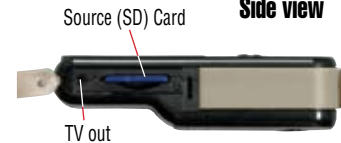

Install batteries

CuddeView X2 operates on 4 “AA” batteries.

- Slide bottom cover (on back of CuddeView X2) down to expose battery compartment.
- Install batteries and replace cover.
- Battery life indicator appears on LCD screen when CuddeView X2 is powered on.
- Remove batteries when CuddeView X2 will not be used for one month or more. Dead batteries can leak acid and destroy your product.



Install SD card(s)

CuddeView X2 takes SD cards. It will hold two SD cards which allows you to copy images from one card to the other.

- Only install or remove SD cards when CuddeView X2 is off!
- **Install SD cards with label facing down into either slot (see below). Installing an SD card incorrectly will damage your CuddeView X2.**
- Push card all the way in until it “clicks.”
- To remove the SD card push it in until it “clicks” and pops part way out.
- CuddeView X2 will allow you to view images with a single SD card in either slot.
- CuddeView X2 will allow you to copy images from Source card to Destination card (see Copy images section on page 9).



Power CuddeView X2 On/Off

To power your CuddeView “ON” push the key labeled: /JPG.

- To turn CuddeView X2 “OFF”, hold down /JPG button for 3 seconds.



Power (on/off)/JPG key

Card status screen

After CuddeView X2 powers ON, a Card Status screen appears which allows you to select between the Source and Destination cards.



- Yellow box around card indicates active card.
- Red X over card indicates empty card slot.
- Push JPG key to switch between cards when two cards are installed or to return to card status screen when viewing images.
- Number below card indicates number of images on that card.

Viewing images

To view images on the selected card, press either the ◀ or ▶ keys.

- To view next image, press ▶ key.
- To view previous image, press ◀ key.
- To return to card status screen (to select other card), press JPG key.



Zoom in/out

CuddeView X2 allows you to “zoom” in on an image to get a closer look at details like antlers.

- To zoom in, press the ▲ key.
- To zoom in even further, continue to press to ▲ key.
- To zoom out, press to ▼ key.
- To switch from zoom to “pan” press the ■ key.
- To exit zoom mode, press the JPEG key.



Panning

To pan up, down, left or right you must first zoom in on displayed image (by pressing ▲ key). Next, press ■ key to switch to “pan” mode.

- Press arrow keys to pan up, down, left, right.
- To exit panning mode, press JPG key.
- To revert to zoom mode, press ■ key.

Yellow box indicates “pan” mode.



Copy images

To copy images from Source card to Destination card, press JPG key to go to card status screen.

- Press **copy** key.
- Select **Yes** (use ► or ◀ to toggle between Yes, No).
- Press ■ to copy images to Destination card.

Copy key



Note: Copy speed is dependent upon image file size, number of images and SD card.

Delete images

CuddeView X2 allows you to delete individual images or all images from your SD card. You must be in “view images” mode.

- Press **Delete** key.
once (to display single image delete).
twice (to display all-image delete).
three times (to exit delete mode).
- Select **Yes** to confirm, **No** to cancel by using arrow keys.
- Press **■** to initiate delete operation.
- Deleted images can NOT be recovered.



The “Rotation Method” for checking cameras

Here is a simple, yet clever system for using your CuddeView X2 to make checking scouting cameras more efficient.

- Each scouting camera has an SD card installed. We recommend 1 GB cards for Cuddeback cameras.
- Install 2 blank SD cards into the CuddeView X2, one in the Source card slot, one in the Destination card slot. Again, we recommend 1 GB cards.

When checking your scouting camera, follow these next steps:

- Remove the SD card from the scouting camera.
- Remove the blank Source SD card from CuddeView X2 and install this card into your camera. Re-arm the camera. You are now finished with that camera.
- Install the camera’s SD card into CuddeView X2’s Source card slot.
- Copy the images from the Source card to the Destination card. While images are being copied you can leave the area and travel to your next camera.
- Once the copy process is complete, delete the images from the Source SD card (be careful, do NOT delete the images from the Destination card). *(continued)*

- View these new images by selecting the Destination card and using the ◀ key to view the most recent images. Continue viewing in reverse order to eliminate having to view all the images on the Destination card.
- Check additional cameras using this same “Rotation Method.” By swapping the blank Source card with the camera card you save the time of waiting for images to copy. You also go home with all images saved to a single Destination card.



Using CuddeView X2 as a PC card reader

CuddeView X2, can be used as a computer card reader.

- Turn CuddeView X2 “OFF”.
- Plug USB cable (included) into CuddeView X2 USB port.



Bottom view

USB port

- Plug USB cable into PC USB port.
- Turn CuddeView X2 “ON”.
- When “USB Mode?” is displayed, select YES to use CuddeView X2 as a card reader, press NO to use CuddeView X2 as a viewer.
- The SD card(s) in your CuddeView X2 will be available on your PC.
- If you use Cuddeback’s Trophy Room Image Management Software, all you need to do is press “G” on your keyboard to copy images to your PC. Trophy Room is available for FREE download at www.cuddeback.com.

Using CuddeView X2 to view images on your TV

CuddeView X2 also allows you to view images on your TV screen.

- Turn CuddeView X2 “OFF”.
- Plug video cable (included) into CuddeView X2’s TV out.



Side view

- Plug video cable into TV’s video in.
- Enable your TV to view the appropriate video source.
- Turn CuddeView X2 on and view images using same methods as previously explained.
- CuddeView X2’s LCD screen will not operate when video cable is attached.

LIMITED WARRANTY

1. Limited Warranty. Non Typical, Inc. (“Non Typical”) warrants the Product to be free from malfunctions and defects in both materials and workmanship for 1 year from the date of purchase (“Warranty Period”). Non Typical will repair or replace, at its option, the Product if it fails to function properly during the Warranty Period, subject to the conditions and/or limitations stated herein. Such repair or replacement is your sole remedies under this Limited Warranty.
2. Limitations. Limited Warranty service will not be provided unless the Product, returned in the manner set forth below, **is accompanied by a copy of your original dated sales receipt**. Non Typical reserves the right to require you to provide your original dated sales receipt.

This Limited Warranty does not cover the following:

- a. Any defect in or damage to the Product that occurs due to mishandling of the Product;
- b. Any defect in or damage to the Product that occurs due to repair, modification, or other similar activity performed by anyone other than Non Typical;
- c. Any defect in or damage to the Product that occurs due to transport, dropping, shock, or other similar activity after your purchase of the Product;
- d. Any defect in or damage to the Product that occurs due to careless or improper storage, or improper use or maintenance of the Product;
- e. Any defect in or damage to the Product that occurs due to exhausted batteries;
- f. Any defect in or damage to the Product that occurs due to sand, mud, or other foreign objects entering the inside of the Product; or
- g. Any defect in or damage to the Product related to accident, misuse, abuse, use with incompatible accessories or attachments, your failure to follow proper operating instructions provided by Non Typical, claims made after the duration of the Warranty Period, or your failure to follow the instructions set forth below with respect to return of the Product to Non Typical.

3. ALL OTHER EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. NON TYPICAL EXPRESSLY DISCLAIMS ALL WARRANTIES NOT STATED IN THIS WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW ARE LIMITED IN DURATION TO THE TERMS OF THIS EXPRESS LIMITED WARRANTY. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU. IN NO EVENT WILL NON TYPICAL BE LIABLE TO YOU, OR ANY THIRD PARTY, FOR ANY DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT. IN ADDITION, NON TYPICAL SHALL IN NO EVENT BE LIABLE TO YOU, OR ANY THIRD PARTY, FOR ANY DIRECT OR INDIRECT DAMAGES OR OTHER SPECIAL, INCIDENTAL, EXEMPLARY OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF OR INABILITY TO USE THE PRODUCT. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR SOME PRODUCTS, SO THE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM JURISDICTION TO JURISDICTION.

4. Notwithstanding any terms of this Limited Warranty to the contrary, no warranty coverage shall be provided for any Product purchased from, through or with the assistance or involvement of any Internet auction web site.

OBTAINING SERVICE FOR YOUR PRODUCT

STEP 1: Visit www.cuddeback.com and click Product Support

You can get answers to common questions, run a troubleshooting wizard, or authorize a product return on our web site (www.cuddeback.com). Note – if you use our web site to authorize a return you DO NOT need to call us.

STEP 2: Call Non Typical at (920) 347-3810

As a condition of the warranty coverage for your Product, you are required to contact Non Typical by telephone at (920) 347-3810 or the web site listed above before returning your Product for service. Do not contact the dealer from whom you purchased the Product. Returning your Product without first calling Non Typical will significantly delay service. Service calls should be made during Non Typical normal business hours of Monday through Friday from 8:00 a.m. to 4:30 p.m., Central Standard Time.



"Thanks for making a great camera, beats all the others I've tried, hands down."

– Ken Luko - Black Earth, WI



"Cuddeback is the best there is! I wouldn't use anything else!"

– Luke Mitchell - Perry, MO



"I have tried many other game cameras but nothing compares or is anything close to a Cuddeback."

– Davis Wood - Lewisburg, WV